

4 . 5 Digit Autoranging Bench Top Multimeter



Users Manual

Contents

Contents	I
Chapter 1	1
Safety Standards	1
Warning	1
Warranty	2
Chapter 2	3
Introduction and Specifications.....	3
Front Panel	3
Rear Panel	7
LCD Display Description.....	8
Function Descriptions	9
Chapter 3 Operation Manual	10
Understanding AC Zero Input Behavior of True RMS Meters	10
DC/AC(TRMS) Voltage	10
DCmV/ACmV.....	11
Ohm/Continuity/DIODE	13
Capacitance Measurement.....	14
Logic Frequency/Duty cycle Measurement.....	15
Clamp Measurement	16
Temperature measurement	17
DC μ A / AC μ A measurement.....	18

