


# Owner's Manual



# COLLUCK

## True RMS AutoRanging Digital Multimeter

Model No.  
HH 2205D

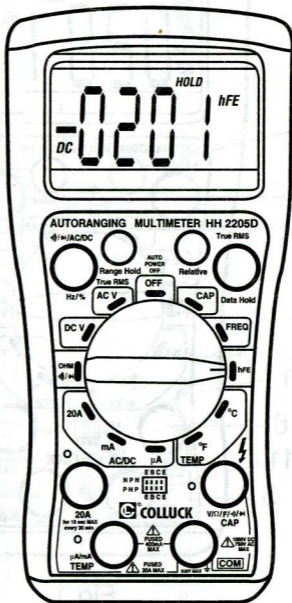

**CAUTION:** Read, understand and follow  
all Safety Rules and Operating Instructions

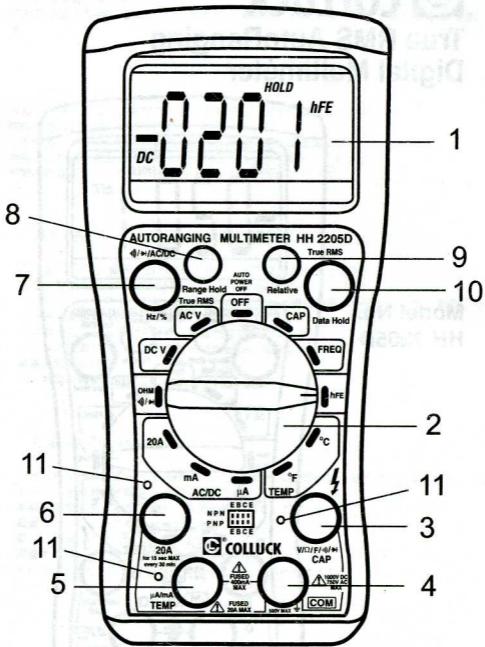


Fig 1

CAUTION: Read instructions and follow all safety rules & operating instructions before using the product.

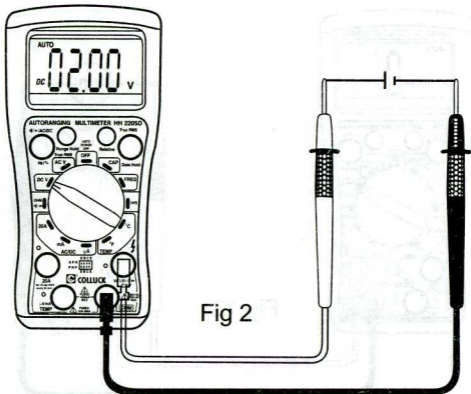


Fig 2

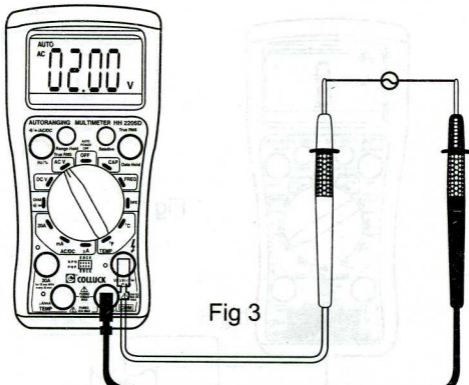
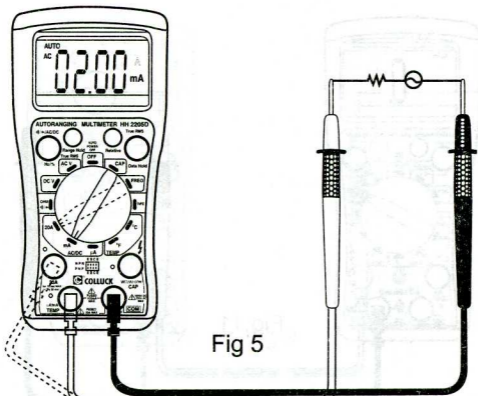
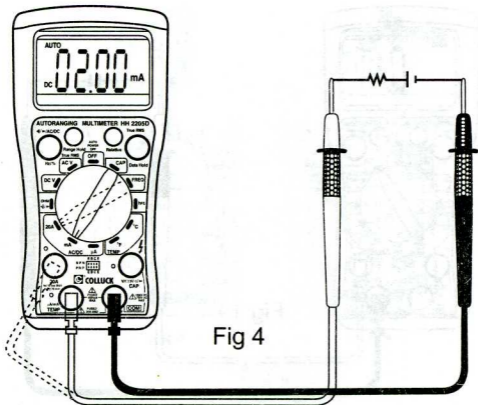


Fig 3



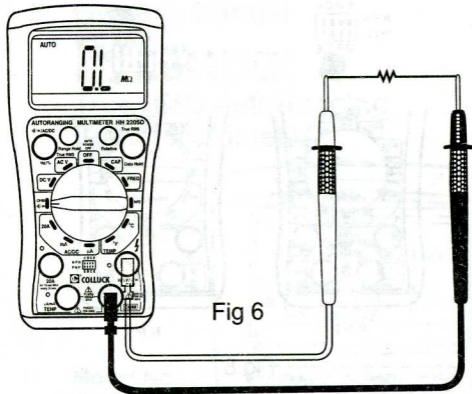


Fig 6


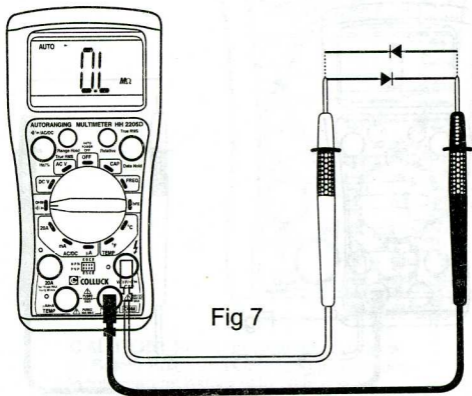


Fig 7


NPN  
PNP  
EBCE



NPN  
PNP  
EBCE

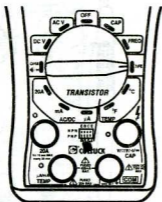

PNP

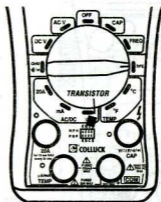

NPN

Fig 8






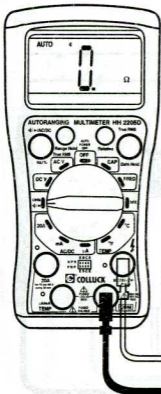


Fig 9

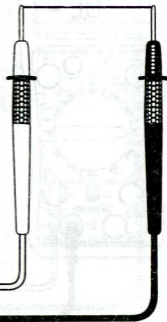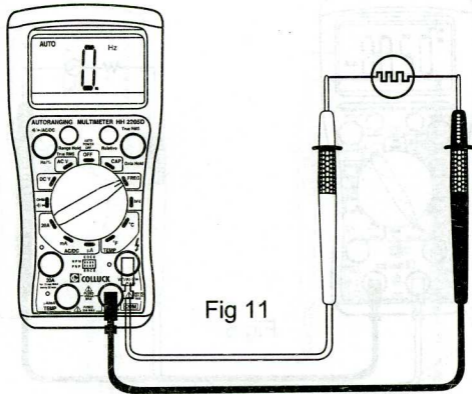

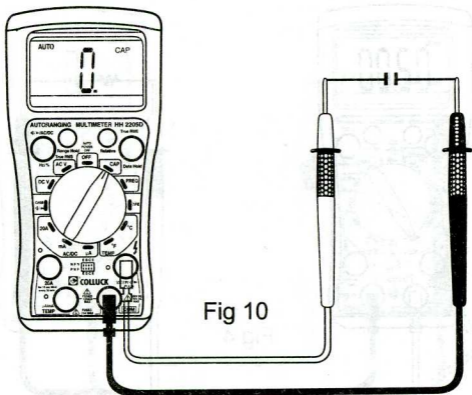

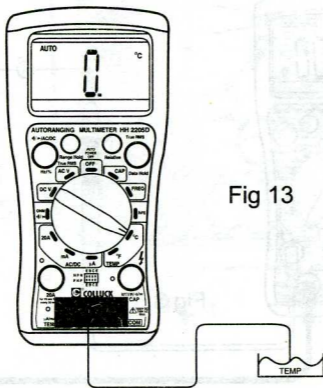

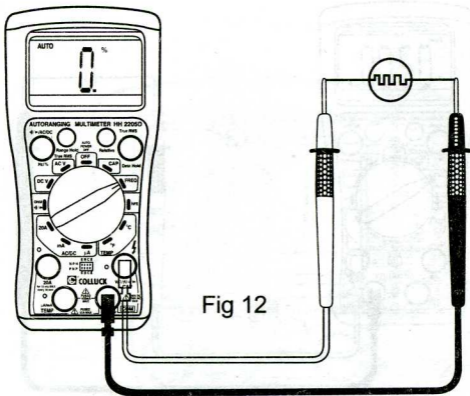

# OWNER'S MANUAL

## HH2205D

### AUTO-RANGING DC/Ture RMS AC DIGITAL MULTIMETER

#### **IMPORTANT!**

Read and understand this manual before using the tester.

Failure to understand and comply with safety rules and operating Instructions can result in serious or fatal injuries and/or property damage.

#### **HUNGHEY ELECTRONICS (SHANGHAI) LTD.**

The First Industry Park, Airport Town

Pu Dong, Shanghai

The P. R. Of China 201202

