Hantek

USER'S MANUAL

6022BE

The User's Manual

Hantek Electronic co.,Ltd.

No.177 zhuzhou road(huite industry city), QingDao,China

www.hantek.com

Content

General Safety Summary	1
Chapter 1 Getting Start	2
System Requirement	
Install Software	
Install Driver	
General Features	
Function Check	
Probe Compensation	
Self Calibration	
Accessories	
Chapter 2 Operating Basics	
The User's Interface	
The Menu System	
The Vertical System	
The Horizontal System	
The Trigger System	
Input Connectors	
Chapter 3 Understanding Function	
Set Oscilloscope	
Set Vertical Systems	
Set Horizontal System	
Set Trigger System	
Measure Signal	

The Utility Function	
The display System	
Save and Load	
Print	
Chapter 4 Application Example	
Simple Measurement	53
Capturing a Single-Shot Signal	54
The Application of the X-Y Operation	
Taking Cursor Measurements.	
Appendix	60
Appendix A: Specifications	
Appendix B: General Maintenance	62
Appendix C: Services and Support	

General Safety Summary

Review the following safety precautions carefully before operate the device to avoid any personal injuries or damages to the device and any products connected to it.

To avoid potential hazards use the device as specified by this user's guide only.

- To Avoid Fire or Personal Injury
- Use Proper Power Cord. Use only the power cord specified for this product and certified for the country of use.
- Connect and Disconnect Properly. Do not connect or disconnect probes or test leads while they are connected to a voltage source.
- Connect and Disconnect Properly. Connect the probe output to the measurement device before connecting the probe to the circuit under test. Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement device.
- Observe All Terminal Ratings. To avoid fire or shock hazard, observe all ratings and markings on the product. Consult the product manual for further ratings information before making connections to the product.
- Use Proper Probe. To avoid shock hazard, use a properly rated probe for your measurement.
- Avoid Circuit or Wire Exposure. Do not touch exposed connections and components when power is on.
- Do Not Operate With Suspected Failures. If suspected damage occurs with the device, have it inspected by qualified service personnel before further operations.
- Provide Proper Ventilation. Refer to the installation instructions for proper ventilation of the device.
- Do not operate in Wet/Damp Conditions.
- Do not operate in an Explosive Atmosphere.
- Keep Product Surfaces Clean and Dry.

Chapter 1 Getting Start

The oscilloscope is small, lightweight, no external power required, portable oscilloscopes! The oscilloscopes is ideal for production test, research and design and all of the applications involving analog circuits test and troubleshooting, as well as education and training.

In addition to the list of general features on the next page, this chapter describes how to do the following tasks:

- System Requirements
- Install Software
- General Features
- General Check
- Probe compensation
- Function check
- Self calibration
- Accessories

System Requirement

To run the oscilloscope software, the needs of computer configuration are as follows:

Minimum System Requirements Operating System Window 2000/XP/VISTA/7

Processor Upwards of 1.00G processor

Memory 128M byte

Disk Space 500M disk free space

Screen resolution 800 x 600

Recommended Configuration

Windows XP SP2 System 2.4G Processor 512M Byte Memory 80G Disk Space 1024 x 768 or 1280 x 1024 resolution DPI Setting: Normal Size (96DPI)

Install Software

Caution: You must install the software before using the oscilloscope.

- 1. While in Windows, insert the installation CD into the CD-ROM drive.
- 2. The installation should start up automatically. Otherwise in Windows Explorer, switch to the CD-ROM drive and run Setup.exe.
- 3. The software Installation is started. Click 'Next' to continue.



4. Choose a destination directory. Click 'Next' to continue.

🔏 Hantek6022BE Ver1.0.1	X
Destination Location	
Setup will install Hantek6022BE Ver1.0.1 in t	the following folder.
To install into a different folder, click Browse,	, and select another folder.
You can choose not to install Hantek6022BB	EVer1.0.1 by clicking Cancel to exit Setup.
Destination Folder	
C:\Program Files\Hantek6022BE	Browse
Wise Installation Wizard?	< <u>B</u> ack <u>Next</u> Cancel

5. Check the setup information. Click Next to start copying of files.

🕌 Hantek6022BE Ver1.0.1	X
Start Installation	
You are now ready to install Hantek6022BE ^v	Ver1.0.1.
Click the Next button to begin the installation information.	or the Back button to reenter the installation
Wise Installation Wizard?	< <u>B</u> ack <u>Next</u> > Cancel

6. This Status dialog is displayed during copying of files.

Hantek6022BE Verl.0.1	X
Installing	
Current File	
Copying file: C:\WINDOWS\inf\Hantek6022BEAMD641.sy	/S
All Files	
Time Remaining 0 minutes 4 seconds	
Wise Installation Wizard?	
	< Back Next > Cancel

7. Updating Your System Configuration.



Updating System Configuration, Please Wait...

8. The installation is complete.

🔏 Hantek6022BE Ver1.	0.1	
	Hantek6022BE Ver1.0.1 has been successfully installed. Click the Finish button to exit this installation.	
	< <u>B</u> ack Einish Cancel	

Install Driver

1. Connect the A-Type Plug of USB cable to your PC'S USB port.



2. Connect the B-Type Plug of USB cable to Hantek 6022BE'S USB port.



3. New hardware is found.



4.New hardware search wizard starts.



5.New hardware search wizard starts to search the driver.



6.New hardware wizard installs "Hantek 6022BE DRIVER ".

Please wait	while the wizard installs the software
	Hantek 6022BE DRIVER
	600
	Setting a system restore point and backing up old files in case your system needs to be restored in the future.

7. The wizard has finished installing for "Hantek 6022BE DRIVER ".



General Features

Product features:

- Dual Channel, Bandwidth: 48MSa/s
- Maximum real-time sample rate: 1Mbytle/channel
- Automatic setup for ease of use (AUTOSET);
- 20 Automatic measurements;
- Automatic cursor tracking measurements;
- waveform storage;
- User selectable fast offset calibration;
- Add, Subtract , Multiply and Division Mathematic Functions;
- Adjustable waveform intensity, more effective waveform view;
- User interface in several user-selectable languages;

Function Check

Perform this functional check to verify that your oscilloscope is operating correctly.

• Connect the oscilloscope

You should connect the A-Type Plug of USB cable to your PC USB port and connect the B-Type Plug of USB cable to oscilloscope USB port.





Input a signal to a channel of the oscilloscope

The oscilloscope is equipped with dual channels plus external trigger.

Please input signal in the following steps:

1. Set the attenuation switch on the probe as 10X and connect the probe on the oscilloscope with CH1. Aim the slot in the probe connector at the faucet on BNC of CH1 and insert, then, turn right to lock the probe. Finally, attach the tip of probe and ground nip to the Connector of Probe compensator.



2. Set the CH1 probe attenuation of the oscilloscope to X10. (The default is X1).



- Attach the tip of probe and ground nip to the Connector of Probe compensator. Click the to button. A square wave will be displayed within a several seconds. (Approximately 1 kHz, 2V, peak- to- peak). Inspect CH2 with the same method.
- 4. Repeat steps 2 and 3

Probe Compensation

Perform this function to match the characteristics of the probe and the channel input. This should be performed whenever attaching a probe to any input channel at the first time.

■ From the "Probe" menu, select attenuation to 1:10. Set the switch to "X10" on the probe and connect it to CH1 of the oscilloscope. When using the probe hook-tip, insert the tip onto the probe firmly to ensure a proper connection.

■ Attach the probe tip to the Probe Compensator and the reference lead to the ground connector, select CH1, and then press the "AUTOSET" button into the menu or the toolbar.

■ Check the shape of the displayed waveform.



Correctly Compensated



Over compensated



Under Compensated

■ If necessary, use a non-metallic tool to adjust the trimmer capacitor of the probe for

the fattest square wave being displayed on the oscilloscope.



Repeat if necessary.

WARNNING: To avoid electric shock while using the probe, be sure the perfection of the insulated cable, and do not touch the metallic portions of the probe head while it is connected with a voltage source.

Self Calibration

The self calibration routine lets you optimize the oscilloscope signal path for maximum measurement accuracy. You can run the routine at any time but you should always run the routine if the ambient temperature changes by 5°Cor more. For accurate calibration, power on the oscilloscope and wait twenty minutes to ensure it is warmed up. To compensate the signal path, disconnect any probes or cables from the input connectors. Then, access the "**Menu -> Utility -> Calibration**" option and follow the directions on the screen. The self calibration routine takes about several minutes.

Accessories

All the accessories listed below are standard accessories for the oscilloscope:

- Probe×2 (1.5m), 1:1, (10:1) Passive Probes
- ♦ A User's Guide
- An USB Cable
- A PC software of the oscilloscope

Chapter 2 Operating Basics

- ♦ The User's Interface
- The Menu System
- The Vertical System
- The Horizontal System
- The Trigger System

The User's Interface

Click the software icon on the desk after you finished the software setting and equipment connecting. Then a user interface will be showed as follows:



In addition to displaying waveforms, the display area is filled with many details about the waveform and the oscilloscope control settings.

1. The Main Menu

All settings can be found in the main menu.

2. The Toolbar

3. Control Panel

4. The Horizontal Panel

The user can change Time/Div, format in the panel.

5. The Vertical Panel

The user can turn on/off the CH1/CH2. Also the user can change the CH1/CH2 volt/div, coupling and probe attenuation.

6. The Trigger Panel

In this panel, the user can change the trigger mode, sweep, source and slope.

7. It shows the system time.

8. Sample Rate

9. It shows the main time base setting.

10. It shows the CH2 information

Readouts show the coupling of the channels. Readouts show the vertical scale factors of the channels. A "B" icon indicates that the channel is bandwidth limited.

11. It shows the CH1 information

Readouts show the coupling of the channels. Readouts show the vertical scale factors of the channels.

12. Output Window

- 13. The markers show the reference points of the displayed waveforms. If there is no marker, the channel is not displayed.
- 14. The same as 13.
- 15. Measure Window.

The Menu System

The Main Menu

<u>File View Display Cursor Utility H</u>elp

1. File: Load or Save data, setup



2. View: Change the user interface



3. Cursor: Cursor measure setup



4. Display: The waveform display setup



5. Utility: Utility setting



6. Help: Turn on help file



The Vertical System

The following figure shows the vertical system menu. It shows the vertical parameters setting.

v	ertical
CH1	
1.00V 🖌	
DC 💌	
x1 💌	Invert
СН2	
1.00V 💙	
DC 💌	
x1 💌	nvert 🗌

- 1. **CH1**: Leads to the setting of the **CH1** parameters
- 2. CH2: Leads to the setting of the CH2 parameters

Use the left mouse button to dragging the channel icon to set the vertical position offset precisely.

Invert: The invert function turns the displayed waveform 180 degrees.

The Horizontal System

The following figure shows the Horizontal System window. It shows the horizontal parameters settings.



1. **Time/DIV**: leads the setting of the time base parameters

2. Format: leads the setting of the horizontal format parameters

The time base ranges of the oscilloscope is listed as follows. The horizontal scan speed is from 4ns/div to 1hour/div.

In the "Format" menu of the "Horizontal" menu, select the display mode to Y-T, X-Y.

Format	
Y-T	*
Y-T	
X-Y	

The Trigger System

The following figure shows the trigger system control.

Tri	gger	
Trigger Mode	Edge	*
Trigger Sweep	Single	~
Trigger Source	CH1	*
Trigger Slope	+	*

Mode: Sets the trigger mode to Edge trigger

Trigger Mode	Edge	~
	Edge	

Sweep: Selects the trigger sweep mode to AUTO, NORMAL or SINGLE

Trigger Sweep	Auto 🔛
	Auto
Trigger Source	Normal
	Single

Source: Selects the trigger source to CH1, CH2, ALT, EXT or EXT/10

Trigger Source CH1 CH1 Trigger Slope CH2

Slope: Selects the edge trigger slope to Positive or Negative slope

Trigger Slope	+		
	+		
	-		

The user can drag the trigger icon to adjust the trigger level and the trigger level will be displayed on the top right corner.

Input Connectors



CH 1/CH 2: Input connectors for waveform display.

EXT.: Input connector for an external trigger source. Use the Trigger Menu to select the Ext. or Ext./10 trigger source.

Other Connector:



GND.: a ground terminalUSB PORT: Connect the B-Type Plug of USB cable to this port.CAL.: Probe compensation output.

Chapter 3 Understanding Function

- Set Oscilloscope
- Set Vertical System
- Set Horizontal System
- Set Trigger System
- Utility Function
- Measure Signal
- Utility Function
- Save and Load
- Print

Set Oscilloscope

Save Setup

The oscilloscope software saves the current setup before you close the oscilloscope software. The oscilloscope recalls this setup the next time you run the software. You can use the "**Save Setup**" menu to permanently save up to several different setups.

Load Setup

The oscilloscope can recall the last setup before the oscilloscope software was running, any saved setups, or the factory setup. You can use the **"Load Setup**" menu to permanently recall a setup.

Factory Setup

The oscilloscope software is set up for normal operation when it is shipped from the factory. This is the factory setup. To recall this setup, push the "**Factory Setup**" menu.

Set Vertical Systems

The CH1/CH2 control panel in sidebar



The Vertical Menu function:

•	Turn ON/Off:	Turn on/off the channel
٠	Volt/DIV:	Select the channel voltage/div
٠	Coupling:	Select the channel coupling
•	Probe:	Select the channel probe attenuation

Change Volt/DIV

You can click "Volt/Div" in "CH1/CH2" Menu to select the voltage

You can also change "CH1/CH2" voltage in sidebar

1.00V	*
20.0mV	
50.0mV	
100mV	
200mV	
500mV	
1.00V	
2.00V	
5.00V	

You can left click and drag the mouse on the green knob or the yellow knob to change the voltage.

Set Channel Coupling

Click "Coupling" in "Channel" menu

In the sidebar, you can change the channel coupling too.

AC	~
DC	
AC	
GND	

You can set the coupling to **DC**, **AC** or **GND**. If you set the coupling to **DC**, it blocks the **AC** component of the input signal.

Probe Attenuation Setting

Select the attenuation factor for the probe. To check the probe attenuation setting, toggle the probe menu to match the attenuation factor of the probe. This setting remains in effect before you changed again.

Click "Probe" in Channel menu to select the probe attenuation

The probe setting window in the sidebar

×1	*
×1	
x10	
x100	
x1000	
×10000	

Note: The attenuation factor changes the vertical scale of the oscilloscope so that the measurement results reflect the actual voltage levels at the probe tip.

Invert

The invert function turns the displayed waveform 180 degrees, with respect to the ground level. When the oscilloscope is triggered on the inverted signal, the trigger is also inverted.

Click "Invert"



The following picture shows the waveform before inversion:





The following picture shows the waveform of inversion:

Set Math

Click M in Toolbar.

The MATH Menu:

Lath		
Setting		
	ON / OFF	
Operate	Source A	СН1
О А-В	Source B	СН2
O A×B	Volt / DIV	1.00V
○ A/B		
O FFT		

- **Turn On/Off:** Turn On/Off the MATH Channel.
- **Source A/B:** Set the sources of the math channel.

The mathematic functions include addition, subtract, multiply and division for CH1 and CH2.

In this function, use the addition, subtraction, multiplication, division function and FFT to operate and analyze the waveform.

Select source A and B. Then adjust the vertical scale and offset to view the math channel clearly. The mathematic result can be measured by the measure and the cursor.

> The Math Function Display



Fast Fourier Transform Function

You can use the FFT mode to convert a time-domain signal into its frequency components (spectrum). You can use the FFT mode for the following types of analysis:

- Measure harmonic content and distortion in systems
- Characterize noise in DC power supplies
- Analyze harmonics in power lines
- Analyze vibration

To use the FFT mode, you need to click *M* in Toolbar to open the FFT setup window.

The FFT setup window:

Lath		
	ON / OFF	
Operate O A + B	Source	СН1
🔿 А-В	Window	Rectangle 🖌
◯ A×B	Scale	Vrms
○ A/B	VERT Scale	1.00V
ाम ତ	HORI Scale	x1 💌

You can select the Source channel, Window algorithm, FFT number, and FFT Zoom factor. It displays only one FFT spectrum at a time.

Source: Source CH1 V

Selects the channel used as the FFT source

Window:	Windo	w	Recta	ngle	*	
Selec	ts th	ie Fl	FT w	vind	ow	v type
Scale:	Vrms	;	*			
Selec	ts th	ie ve	ertica	al sc	al	e units
Vert Sca	le:	1.00	v	~		
Selec	ts th	ie ve	ertica	al so	al	е
HORI Sc	ale:	x1		1	/	

Selects the FFT zoom factor

Sets horizontal scale, If the information is more than the quantity displayed to the display window, more information is displayed by using scroll bar.

You can click the **ONTOFF** button to start FFT math, also you can click this

button to stop FFT math.

Click "Save" button if you want to save FFT math result. You can save the data into Word file, Excel file or Text file.

Harmonics Information			
1st	50.0kHz	1.20V	
2nd	100kHz	707mV	
3rd	150kHz	58.8m∨	
4th	200kHz	235m∨	
5th	250kHz	308m∨	
6th	300kHz	57.0m∀	

Harmonic information window shows the information of Harmonics.

Measurement information window shows the information about measurement of FFT.

Measurement Information		
SNR	-0.144dB	
THD	-3.391dB	
ENOB	-0.316bits	
SFDR	4.562dB	
SINAD	-1.678dB	
TotalPower	5.505dB	

Measurement Parameters:

- $\sum V_{*}^{2}$: Amplitude of the fundamental frequency
- $\sum H_{*}^{2}$: Sum of Amplitude of Harmornic (excluding fundamental frequency)
- $\sum N_{\rm s}^{\rm 2}$: Sum of Noise (excluding fundamental frequency, Harmonics, DC and Nyquist bins)
- *F* : Total Number of bins
- F_h : Total Number of bins of Harmonic

 F_n : Total Number of bins of Noise.

SNR (Signal to Noise Ratio): The ratio of the amplitude of the fundamental frequency to the Noise.

$$SNR = 10 \log_{10} \left[\frac{\sum V_{i}^{2}}{\frac{F}{F_{n}} \sum N_{i}^{2}} \right] dB$$

ENOB (Effective Number of Bits) : The number of bits in an ideal converter that would be required to give the same SNR performance.

$$ENOB = \frac{SNR - 1.76}{6.02} bits$$

SINAD (Signal to Noise and Distortion):The ratio of the amplitude of fundamental frequency to the Noise, but Noise include Harmonics.

$$SINAD = 10\log_{10}\left[\frac{\sum V_i^2}{\frac{F - F_h}{F_n}\sum N_i^2 + \sum H_i^2}\right]$$

-**THD** (Total Harmonic Distortion): The ratio of the RMS sum of the harmonics to

the RMS value of the fundamental.

$$THD = 10\log_{10}\left[\frac{\sum H_i^2}{\sum V_i^2}\right] dB$$

SFDR (Spurious Free Dynamic Range): The ratio of the RMS signal amplitude to the RMS value of the peak spurious spectral component. The peak spurious component may or may not be a harmonic.

 $\sum S_{\mathbf{s}}^{\mathcal{I}}$: The RMS value of the peak spurious spectral component.

$$SFDR = 10 \log_{10} \left[\frac{\sum V_i^2}{\sum S_i^2} \right] dB$$

Total Power: The RMS value of the sum of all spectral components.

 $\sum A_{*}^{2}$: Sum of Noise excluding DC and Nyquist.

$$TotalPower = 10log_{10} \left[\sum A_i^2\right] dB < ![endif] >$$

$$THD = 20 \log_{10} \frac{\sqrt{V_2^2 + V_3^2 + V_4^2 + V_5^2 + V_6^2}}{V_1}$$

The FFT display Windows:



Set referance



Ref
Load
VOLT / DIV 1.00V V Time / DIV 50.00us V
Ref Data Len : 0

The Reference Channel Function:

- **Turn On/Off:** Turn on/off the reference channel.
- **Volt/DIV:** Channel the resolution of the reference channel.
- **Reset:** Reset the reference channel vertical position to zero.

The Reference Waveform Display Window:



Note: If you turn on the "Reference" channel, the load file window will appear.

Set Horizontal System

The following figure shows the Horizontal System window. It shows the horizontal parameters settings.



1. **Time/DIV**: leads the setting of the time base parameters

Time/DIV	
500.0us	*

2. **Format**: leads the setting of the horizontal format parameters The time base ranges of the oscilloscope is listed as follows. The horizontal scan speed is from 4ns/div to 1hour/div.

In the "Format" menu of the "Horizontal" menu, select the display mode to Y-T, X-Y.

Format	
Y-T	*
Y-T	
X-Y	

Set Trigger System

Click "Trigger" in main menu

Trigger		
Trigger Mode	Edge 🔽	
Trigger Sweep	Auto 💌	
Trigger Source	СН1 💌	
Trigger Slope	+ 👻	

The trigger determines when the oscilloscope starts to acquire data and display a waveform. When a trigger is set up properly, it can convert unstable displays or blank screens into meaningful waveforms.

If the oscilloscope wants to acquire a waveform, it collects enough data so that it can draw the waveform to the left of the trigger point. The oscilloscope continues to acquire data while waiting for the trigger condition to occur. The oscilloscope continues to acquire enough data so that it can draw the waveform to the right of the trigger point after it detects a trigger,.

The Edge trigger determines whether the oscilloscope finds the trigger point

on the rising or the falling edge of a signal. Select **Edge** trigger mode to trigger on **Rising** edge or **Falling** edge.

Mode: Select the trigger mode.

Frigger Mode	Edge	*
	Edge	

The oscilloscope only provides edge trigger mode. **Sweep**: Set the sweep mode to **Auto**, **Normal** or **Single**.

Trigger Sweep	Auto 🔽
Trigger Source	Auto Normal Single

Auto: Acquire waveform even no trigger occurred
Normal: Acquire waveform when trigger occurred.
Single: Acquire waveform when trigger occurred then stop
Source: You can use the trigger source options to select the signal that the oscilloscope uses as a trigger. The source can be any signal connected to a channel BNC, or to the EXT. BNC.

Trigger Source	CH1	~
	CH1	
Trigger Slope	CH2	

CH1: Select CH1 as trigger signalCH2: Select CH2 as trigger signalSlope: Set the slope to Rising (+) or Falling (-).

Trigger Slope	+	*
	+	
	-	

Rising: Trigger on rising edge **Falling**: Trigger on falling edge

Measure Signal

Cursor



Cursor Menu

Click "Cursor" in main menu



This method allows you to take measurements by moving the cursors

1. Source



The user can set the source to CH1, CH2, FFT and MATH. But the FFT source can only use **Trace** type.

When you use cursors, be sure to set the **Source** to the waveform on the display that you want to measure.

2. Type



There are four types of cursors: Cross, Vertical and Horizontal

1) Cross

The **Cross** cursors appear as cross lines on the display and measure the vertical and horizontal parameters.



The **Cross** cursor display window

The Cross measure result displays on status bar

Freq = 12.683 KHz Time = 78.843 uS Volt = 3.403 V

2) Vertical

The **Vertical** cursors appear as vertical lines on the display and measure the vertical parameters.

The Vertical cursor display window



The Vertical cursor measure result display on status bar

Freq = 12.568 KHz Time = 79.566 uS

3) Horizontal

The **Horizontal** cursors appear as horizontal lines on the display and measure the horizontal parameters.

The Horizontal cursor display window



The Horizontal cursor measure result display on status bar

Volt = 3.502 V

To acquire and display a signal, please do the steps as follows:

Connect signal to **CH1** by using probe

The DSO set the vertical, horizontal, and triggers controls at the best status automatically. Also, you can adjust the controls to meet your measurement to optimize the waveform display.

Select Channel
Measure 📮 🗙
СН1 -
CH1
CH2
Measure 🛛
CH1
<pre> Iype Vertical Maximum Minimum Peak to Peak Fop Base Middle Middle Middle Mean Cycle Mean Opitive Overshoot Negative Overshoot Period Period Frequency Kise Time Fall Time Fall Time Opity Cycle Opity Cycle Fold Puty Cycle Fold Fulles Width </pre>
─────────────────────────────────────
🔤 👽 - Fulse Width

Measure

Maximum: Voltage of the absolute maximum level, Measured over the entire waveform

Minimum: Voltage of the absolute minimum level, Measured over the entire waveform

Peak To Peak: Peak-to-peak = Max – Min, Measured over the entire waveform

- **Top**: Voltage of the statistical maximum level, Measured over the entire waveform
- **Base**: Voltage of the statistical minimum level, Measured over the entire waveform

Middle: Voltage of the 50% level from base to top

RMS: The Root Mean Square voltage over the entire waveform

Amplitude: Amp = Base – Top, Measured over the entire waveform

Mean: The arithmetic mean over the entire waveform

Cycle Mean: The arithmetic mean over the first cycle in the waveform

Preshoot: Positive Overshoot = (Max - Top)/Amp x 100 %, Measured over the entire waveform

Overshoot: Negative Overshoot = (Base - Min)/Amp x 100 %, Measured over the entire waveform

Period: Time to take for the first signal cycle to complete in the waveform

Frequency: Reciprocal of the period of the first cycle in the waveform

Rise Time: Time taken from lower threshold to upper threshold

Fall Time: Time taken from upper threshold to lower threshold

+**Duty Cycle**: Positive Duty Cycle = (Positive Pulse Width)/Period x 100%, Measured of the first cycle in waveform

- -**Duty Cycle**: Negative Duty Cycle = (Negative Pulse Width)/Period x 100%, Measured of the first cycle in waveform
- +**Pulse Width**: Measured of the first positive pulse in the waveform. The time between the 50% amplitude points

-**Pulse Width**: Measured of the first negative pulse in the waveform. The time between the 50% amplitude points

- 1. To measure the frequency and "**Vpp**", you can do these steps as follows:
- 2. Click the Frequency button, the frequency of the signal display on the bottom of the waveform interface.
- 3. Click the Seak to Peak button, the "**Vpp**" of the signal will also display on the bottom of the waveform interface.



4. To clear the measurement on the waveform interface, click the $\overline{\mathbf{V}}$ button.

The results of measure display in Information output.

Information output			
Ξ	CH1		
	Peak to Peak		5.11V
	- Pulse Width		554uS

The Utility Function

Click the "Menu -> Utility" to get into the "Utility" menu.



The "Utility" Functions:





Interpolation

Factory Setup

Click "Factory Setup" in "Utility" menu to load default setups



When you click the **Factory Setup** in **Utility** menu, the oscilloscope displays the CH1 and CH2 waveforms and removes all other waveforms.

The oscilloscope set up for normal operation when it is shipped from the factory and can be recalled at anytime by user.

The Factory Setup function does not reset **Date and time**.

Interpolation

Click "Utility->Interpolation"



The Step Interpolation



The Linear Interpolation



The Sin(x)/x Interpolation



Note: The default interpolation mode is Sin(x)/x.

The display System

Click "**Display**" in main menu

The following figure shows the display system menu. It shows the display parameters setting.



Display type

Click **"Type**" in **"Display**" menu. The following figure shows the type parameters setting.

Display	Acquire	Utility	Hel	o -		
Туре			•	✓ Vectors	Ctrl+V	
🖌 Grid		Ctrl+0	5	Dots	Ctrl+D	
Inten	sity	Ctrl+1	[
Wave	form Colo	r				

If the **Vectors** type mode is selected, the waveform will be displayed as following figure.



If the **Dots** type mode is selected, the waveform will be displayed as following figure.



Display Grid

Click "Display" in main menu

The grid shows:



The grid not shows:



Display Intensity

Click "**Display->Intensity**" in main menu The following figure shows the intensity dialog. It shows the display parameters setting.

Intensity		×
Waveform		j
Grid		
	确定	

You can change the grid and waveform color intensity in this dialog.



Save and Load

Click "File" in main menu to save waveform, setups and screen



1. Save Data

The User's Manual

Save waveform data

2. Save Setups

Save the current oscilloscope setups to file Click "**File**" in main menu to recall saved waveform, setup



1. Load Data

Load the waveform

2. Load Setup

Load the instrument that had saved

Print



- 1. Click "Print" in "File" menu to set the printer to print the current waveform.
- 2. Click the "**PrintPreview**" in "File" menu to get into the Preview window.

In "**PrintPreview**" window, use the estimate the size of the waveform graph. Click the "**Close**" button to turn this window off and click the "**Print**" button to print the report.

Chapter 4 Application Example

- Simple Measurement
- Capturing a Single-Shot Signal
- The Application of the X-Y
- Taking Cursor Measurement

Simple Measurement

To acquire and display a signal, please do the steps as follows:

Connect signal to CH1 by using probe

The DSO set the vertical, horizontal, and triggers controls at the best status automatically. Also, you can adjust the controls to meet your measurement to optimize the waveform display.

Measure	ą
CH1	
- Top Basa	
Middla	
Amplitude	
Positive Overshoot	
Negative Overshoot	
Period	
Frequency	
🔲 💊 Rise Time	
🔲 💊 Fall Time	
🔲 💊 + Duty Cycle	
- 🔲 🔶 - Duty Cycle	
🔄 🔍 🔶 + Pulse Width	
🔤 💊 - Pulse Width	

1.To measure the frequency and "**Vpp**", you can do these steps as follows: 2.Click the $\square \mathrel{\textcircled{}} \mathbb{F}_{requency}$ button, the frequency of the signal display on the bottom of the waveform interface.

3.Click the Seak to Peak button, the "**Vpp**" of the signal will also display on the bottom of the waveform interface.

4. To clear the measurement on the waveform interface, click the $\overline{}$ button.



The results of measure display in Information output.

Information output		
Ξ	CH1	
	Peak to Peak	5.11V
	- Pulse Width	554uS

Capturing a Single-Shot Signal

To capture a single event, it needs to gather some pre-test knowledge of the signal in order to set up the trigger level and slope correctly. For example, if the event is derived from 3.3V COMS logic, a trigger level of 1.2 or higher Volts should work on a rising edge.

Do these steps as follows:

- 1. Set the probe and the channel attenuations to X 10.
- 2. Set up the trigger in the Trigger Menu, or in the Trigger Setting window.
 - 1) Adjust the Trigger Mode to Edge.

- 2) Set the Trigger Sweep to Single.
- 3) Set the Trigger Source to CH1.
- 4) Set the Trigger Slope to "+" which means you select the rising edge.
- 5) Adjust the Volts/Div and the time base in a proper range for the signal.
- 6) Drag the trigger level sign on the waveform display screen to proper position. It's usually higher a little above the normal level.
- 7) Click (to start capturing. When the trigger conditions are met, data appears on the display representing the data points that the oscilloscope obtained with one acquisition.

The Application of the X-Y Operation

X-Y Plot acts to analyze correlation of data of two channels. Lissajous diagram is displayed in the screen when you use **X-Y** Plot, which enables to compare frequencies, amplitudes and phases of counterpart waveform against the reference waveform. This makes it possible to compare and analyze frequency, amplitude and phase between input and output.

Do these steps as follows:

- 1. Set the probe attenuation to "**x10**". Set the switch to "**x10**" on the probes.
- 2. Connect the CH1 probe to the input of the circuit, and connect the CH2 probe to the output of the circuit.
- 3. Click "Autoset" button.
- 4. Adjust the vertical scale and offset to display approximately the same amplitude signals on each channel.
- 5. Select X-Y format at Horizontal window. The oscilloscope will displays a Lissajous pattern representing the input and the output characteristics of the circuit.
- 6. Adjust the scale and offset of the horizontal and vertical to a desirable waveform display. The following picture shows a typical example.
- 7. Apply the Ellipse Method to observe the phase difference between the two channels.

Signal in X-Y Format:



Instruction of the Ellipse Method



Sin θ = A/B or C/D, where θ = phase shift (in degrees) between the two signals.

From the formula above:

θ = ±arcsine (A/B) or ±arcsine (C/D)

 θ must be in the range of $(0 \sim \pi/2)$ or $(3\pi/2 \sim 2\pi)$ if the main axis of the ellipse is between I and III quadrant, . If the main axis is at II and IV quadrant, θ must be in the range of $(\pi/2 \sim \pi)$ or $(\pi \sim 3\pi/2)$.

Taking Cursor Measurements

Use cursors to make time and amplitude measurements on a waveform quickly.

Measure the Peak Frequency or Time of the First Sine Waveform Do these steps:

- 1. Click "**Cursor->Source**", select CH1 (select CH2 if you want measure CH2).
- 2. Click "Cursor->Type", select Vertical.
- 3. Push left mouse button, and the vertical lines appear.
- 4. Drag the mouse button to the point you want to measure.
- 5. Release the left mouse button, the frequency difference and time difference will be shown at the status bar.



Measure the Frequency and Time:

Read the details showing in the status bar.

Freq = 12.568 KHz Time = 79.566 uS

Measure the Amplitude of the First Waveform Peak of the Waveform Do these steps:

- 1. Click "**Cursor->Source**", select CH1 (select CH2 if you want measure CH2).
- 2. Click "Cursor->Type", select Horizontal.
- 3. Push left mouse button, and the Horizontal lines appear.
- 4. Drag the mouse button to the point you want to measure.
- 5. Release the left mouse button, the voltage difference will be shown at the status bar.

Measure the Amplitude:



Read the details showing in the status bar.

Volt = 3.502 V

Note: Click "**Cursor->Type**", select "**Cross**", you can measure time and amplitude at one time.

Appendix

- Appendix A: Specification
- Appendix B: General Maintenance
- Appendix C: Services and Support

Appendix A: Specifications

Specifications Table:

Input	
Real	Real-time sampling:48MS/s
Channels	2 Channels
Bandwidth	20MHz (-3dB)
Vertical resolution	8 bits/channel
Gain range	10mV ~ 5V/div @ x1 probe(10mV, 20mV, 50mV, 100mV,
	200mV, 500mV, 1V, 2V, 5V/div1,2,5 sequence)
	100mV ~ 50V/div @ x10 probe
	1V ~ 500V/div @ x100 probe
	10V ~ 5KV/div @ x1000 probe
Range	8 divisions
Offset level	+/-4 divisions
Coupling	DC
Offset increments	0.02 div
Impedance	1M ohm
DC accuracy	+/-3%
Input protection	35Vpk (DC + peak AC < 10 kHz, without external
	attenuation)
Display Mode	Y-T, X-Y
Timebase	
Timebase range	4ns/div ~ 1h/div(4ns, 10ns, 20ns, 40ns, 100ns, 200ns,
	400ns, 1us, 2us, 4us, 10us, 20us, 40us, 100us, 200us,
	400us, 1ms, 2ms, 4ms, 10ms, 20ms, 40ms, 100ms,
	200ms, 400ms, 1s,2s, 4s,
	10s,20s,40s,10m,20m,40m,1h /div 1-2-4 sequence)
Range	10 divisions
Buffer Size	Max. 1M samples/channel
Trigger	
Туре	Edge trigger
Mode	Auto, Normal and Single
Autoset	Yes
Range	10 divisions
Trigger level	+/-4 divisions
Settabillity	0.02 div increments

Math	
Measurements	Vp-p, Vmax, Vmin, Vmean, Vrms, Vamp, Vtop, Vbase,
	Vmid,positive overshoot, negative overshoot, cycle mean,
	cycle RMS, period, frequency, positive pulse width,
	negative pulse width, rise time (10%~90%), fall time
	(10%~90%), positive duty cycle, negative duty cycle
Math	Addition, Subtraction, Multiplication, Division
FFT	Rectangular, Hanning, Hamming, Blackman Window
Physical	
Interface	USB2.0 (USB1.1 compatible)
Power	No external power source required.
	Bus-powered from USB
Dimensions	187 x100 x 33(mm)

Appendix B: General Maintenance

General Care

Do not store or leave the oscilloscope where the device will be exposed to direct sunlight for long periods of time.

Caution

To avoid damages to the device or probes, do not expose them to sprays, liquids or solvents.

Cleaning

Inspect the device and probes as often as operating conditions require. Make sure the device disconnect form all power sources.

To clean the exterior surface, perform the following steps:

- 1. Remove loose dust on the outside of the oscilloscope and probes with a lint-free cloth. Use care to avoid scratching the clear glass display filter.
- 2. Use a soft cloth dampened with water to clean the device.

Caution

To avoid damages to the surface of the device or probes not use any

abrasive or chemical cleaning agents.

Appendix C: Services and Support

Thank you for choosing HANTEK. Please contact us through the following ways should you have any inquiry regarding our products. We shall do our best to help you.

- 1. Contact your local HANTEK distributor;
- 2. Contact your local HANTEK field office;
- 3. Contact HANTEK headquarters in China.

Headquarters

HANTEK Technologies Co., Ltd <u>http://www.hantek.net</u>

Address: 5F.NO. 177 zhuzhou road(huite industry city),QingDao,China 266000 Tel: +86-532-88703687 / 88703697 Fax: +86-532-88705691 Email: <u>service@hantek.com.cn</u>

Technical Support

Tel: +86-532-88703687 (ext: 606) Email: <u>support@hantek.com.cn</u>

Marketing Department

Tel: +86-532-88703687 (ext: 607) Email: <u>david@hantek.com.cn</u>

Sales Department

Tel: +86-532-88703687 (ext: 605) E-mail: sales@Hantekins.com