

Circuit Specialists, Inc




CSI5003XE

DC REGULATED POWER SUPPLY

Circuit Specialists Inc
220S. Country Club Dr., Bldg. #2
Mesa, AZ. 85210
Tel: 800-528-1417/480-464-2485
Fax: 480-464-5824
Internet: www.CircuitSpecialists.com

● SPECIFICATION

MODEL		CSI5003XE	
OUTPUT VOLTAGE	(CV)	0-50V	
OUTPUT CURRENT	(CC)	0-3A	
RIPPLE REJECTION		1.5mVrms	
LINE REGULATION	(CV)	$\leq 0.01\% + 5\text{mV}$	
	(CC)	$\leq 0.01\% + 5\text{mA}$	
LOAD REGULATION	(CV)	$\leq 0.01\% + 5\text{mV}$	
	(CC)	$\leq 0.01\% + 5\text{mA}$	
INPUT VOLTAGE		110V-127V AC $\pm 1\%$ SWITCHABLE	
DISPLAY ACCURACY	Voltage	100mV ± 1 digits	
	Current	10mA ± 2 digits	

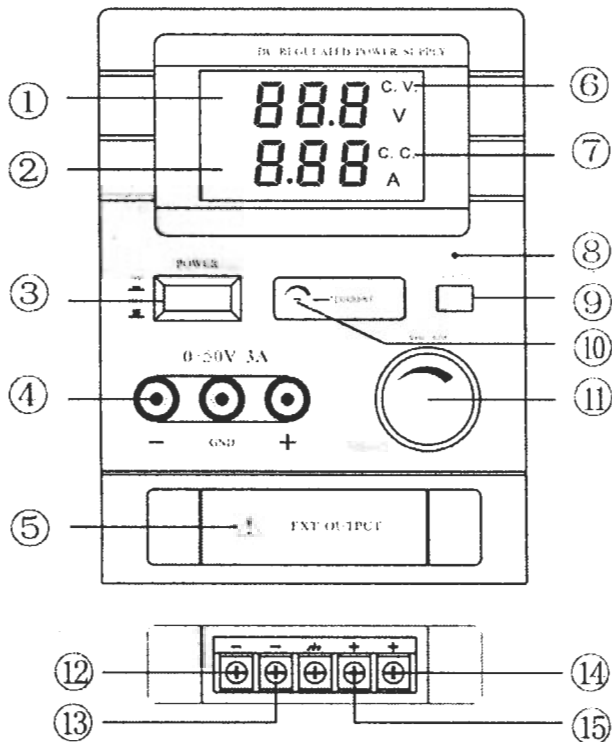

- | | |
|----------------------------------|---------------------------|
| (1) Voltage indication | (9) Output switch |
| (2) Current indication | (10) Current setting knob |
| (3) Power switch | (11) Voltage setting knob |
| (4) Output socket | (12) -S output port |
| (5) Expansion output terminal | (13) -Output port |
| (6) Regulated voltage indication | (14) +S output port |
| (7) Current regulator indication | (15) +Output port |
| (8) Output indicator light | |

● Operating manual

1. Press the power on/off button to make power on.
2. Adjusting the voltage setting knob to the voltage which you need (Voltage can be seen directly on the LED)
3. Adjusting the current setting knob (Using the specified screwdriver to set security current you need. The current of this DC regulated power supply usually will be the maxima value in the leave-factory check and acceptance.
4. To connect the load and press the output switch, you can see the light of output indicator at the same time. And you can read the value of load current on the LED.

● Specialty

1. Presetting the voltage and current
2. DC output switch